


SILT-SAVER TEMPORARY SEDIMENT BASIN/DOWN DRAIN FILTRATION SYSTEM

INSTALLATION PROCEDURE

1. Install 12" corrugated HDPE piping in a vertical position.
 2. Level and compact back-fill to top of piping, be sure to leave at least a 6" depression for back-fill around the base of the assembly.
 3. Install the SS-500 Attachment onto piping.
- * Note: When SS-500 is used in a highly concentrated flow area attach to piping using drywall screws or equivalent.
4. Install Silt-Saver SS-100A frame and filter assembly onto SS-500 attachment and fill soil pockets in filter completely.
 5. Back-fill to stabilize as necessary.

* User should not assume all flow rates, site conditions and safety measures are considered. Installation procedures and safety considerations can vary upon site conditions. *

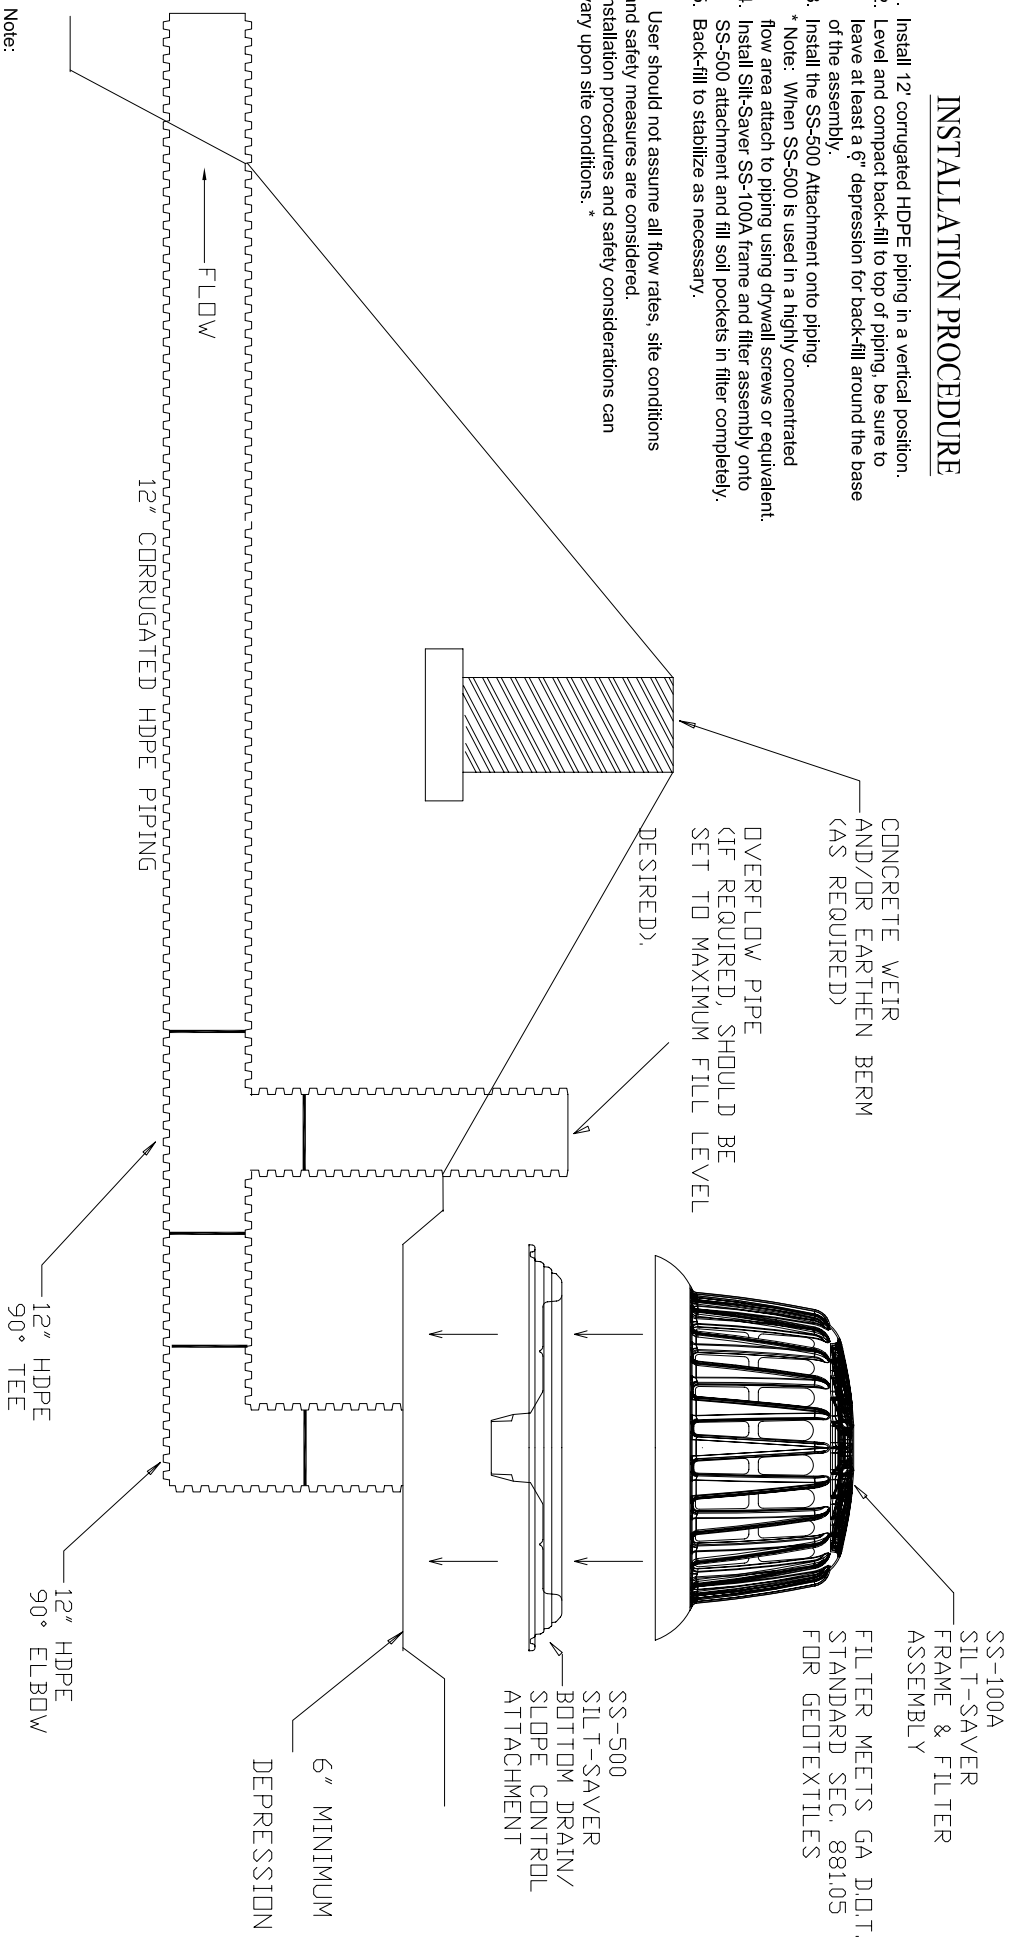

Note:
This drawing should be used for representation only. Silt-Saver, Inc. does not warrant any misuse of its products and any misrepresentation or misuse shall be at the users sole responsibility.

SS-500 SILT-SAVER BOTTOM DRAIN/SLOPE CONTROL ATTACHMENT



Silt-Saver® Inc.
1094 Culppepper Drive
Conyers, GA 30094
USA

Telephone: (770) 388-7818
Toll Free: (888) 382 SILT
(7458)
Fax: (770) 388-7640

DRAWING #: FX-2106

DRAWN BY:
T. BAERWOLF

JUNE 11, 2001